



Pacific Gas and Electric Company

VALVE MAINTENANCE RECORD FORM

(Make all entries in black or blue permanent ink)

DIVISION PENINSULA DISTRICT COLMA VALVE NO. 1257

LOCATION (SKETCH ON BACK IF REQUIRED) Redacted SAN FELIPE S. BRUNO SAP WM NO.

LINE/STATION NAME TRANSMISSION: EMERGENCY OTHER

OPER. OR WALL MAP 8 OPER. DIAG. OR PLAT F2 BLK. 43 DISTRIBUTION: STATION CRITICAL MAIN

VALVE DATA

SIZE 4" MAKE/MODEL N/A TYPE PLUG PRESS RATING N/A SERIAL NO. N/A USE ZONE

RECOMMENDED LUBRICANT/SEALANT SW1033 LUBE/INSPECT FREQ. ANNUAL Gearbox Breather (Bettis) Installed?

RECOMMENDED STEM PACKING MATERIAL N/A High-Head Extension Vent Installed?

ACTUATOR TYPE MANUAL COMMENTS OPEN

* Manual gearbox filled with oil? YES NO 90 Wt to 140 Wt Oil Grand Slam Grease NO Drained? YES NO

Wrench (Key) Size: 3 Quarter Turn Multi-Turn (Gate Valve or Plug / Ball Valve w/Gear box) Number of Turns: 1/4 TURN

** Enter Service History on next page.



Pacific Gas
and
Electric
Company

VALVE MAINTENANCE RECORD FORM Line / Station Name:

(Make all entries in black or blue permanent ink) Valve Number: 1257

SERVICE HISTORY (see notes)

DATE MM/DD/YY	INITIAL LAN ID	VERIFY VALVE NUMBER Y/N	INSPECT Y/N	LUBE (If req'd) Y/N or N/A	OPERATE Y/N F/P	VALVE POSITION		REPAIRS REQUIRED (If any)	ACTION TAKEN (If required)	REPAIRED DATE MM/DD/YY INITIAL - LAN ID	REVIEWED DATE MM/DD/YY INITIAL - LAN ID
						As Found	As Left				
07-21- 10	ES ES8	Y	Y	Y	Y P	OPEN	OPEN			-	8/15/10 RD - RDDC
										-	-
										-	-
										-	-
										-	-
										-	-
										-	-
										-	-
										-	-
										-	-
										-	-

NOTES: 1) Use Y/N for yes/no to indicate item performed and completed. 2) "LUBE" pertains to lubrication of the ball or plug. 3) "OPERATE" means to partially operate as a minimum.
4) Use F/P to indicate Full or Partial Operation. 5) Valve positions = C (closed), O (open), T (throttling)