



VALVE MAINTENANCE RECORD FORM
(Make all entries in black or blue permanent ink)

DIVISION East Bay DISTRICT Central VALVE NO. B33

LOCATION (SKETCH ON BACK IF REQUIRED) Redacted SAP WM NO. 4128084U

LINE/STATION NAME UNK N/A TRANSMISSION: EMERGENCY OTHER

OPER. OR WALL MAP 7 OPER. DIAG. OR PLAT A7 BLK. 10 DISTRIBUTION: STATION CRITICAL MAIN

VALVE DATA

SIZE 2" MAKE/MODEL UNK TYPE PLUG PRESS RATING UNK SERIAL NO. N/A-UNK USE ZONE
Ball, Plug, Gate PSIG MLV, BTU, Zone, Station, etc.

RECOMMENDED LUBRICANT/SEALANT 1033 LUBE/INSPECT FREQ. Annual Gearbox Breather (Bettis) Installed? YES NO NA
Brand/Type or NA Annual, Monthly, Other

RECOMMENDED STEM PACKING MATERIAL N/A 1033 High-Head Extension Vent Installed? YES NO NA
Brand/Type or NA

ACTUATOR TYPE Manual Lever
Manual Lever, Exposed Gearing (no gearbox), Enclosed Gearing*, Power Actuated

COMMENTS OPEN

* Manual gearbox filled with oil? YES NO
 90 Wt to 140 Wt Oil NO
 Grand Slam Grease

Wrench (Key) Size: 1 Quarter Turn Multi-Turn (Gate Valve or Plug / Ball Valve w/Gear box) Number of Turns:

** Enter Service History on next page.



Pacific Gas
and
Electric
Company

VALVE MAINTENANCE RECORD FORM Line / Station Name:

(Make all entries in black or blue permanent ink) Valve Number: B-33

SERVICE HISTORY (see notes)

DATE MM/DD/YY	INITIAL LAN ID	VERIFY VALVE NUMBER Y/N	INSPECT Y/N	LUBE (If req'd) Y/N or N/A	OPERATE Y/N F/P	VALVE POSITION As Found As Left	REPAIRS REQUIRED (If any)	ACTION TAKEN (If required)	REPAIRED DATE	REVIEWED DATE
									MM/DD/YY INITIAL - LAN ID	MM/DD/YY INITIAL - LAN ID
5.22.09	Redacted	Y	Y	Y	Y P	OPEN OPEN			-	Redacted
6-5-10	Redacted	Y	Y	Y	Y P	O O			-	Redacted
5 27 11	Redacted	Y	Y	N	N P	O O	NO STOPS !! Corrective to replace (MA)		-	Redacted
6 25 12	Redacted	Y	Y	N	N -	O O	NO STOPS !! Corrective		-	Redacted
5 29 13	Redacted	Y	Y	N	Y P	O O	NO STOPS Corrective NO STOPS !! (MA)		-	Redacted
									-	-
									-	-
									-	-
									-	-
									-	-

NOTES: 1) Use Y/N for yes/no to indicate item performed and completed. 2) "LUBE" pertains to lubrication of the ball or plug. 3) "OPERATE" means to partially operate as a minimum. 4) Use F/P to indicate Full or Partial Operation. 5) Valve positions = C (closed), O (open), T (throttling)