
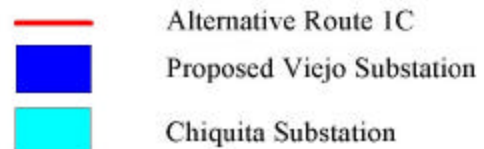


Figure 6. Paleontological Sensitivity, Route IC



SWCA
ENVIRONMENTAL CONSULTANTS

Los Angeles Office

23392 Madero, Suite L
Mission Viejo, CA 92961
TEL 949.770.8042
FAX 949.458.9058

info-losangeles@swca.com

Tt = Topanga Formation
High Sensitivity
Tm = Monterey Formation
High Sensitivity
Tco = Capistrano Formation (Oso Member)
High Sensitivity
Tplv = Puente Formation (La Vida Member)
High Sensitivity

Tps = Puente Formation (Soquel Member)
High Sensitivity
Qac = Quaternary Alluvium and Colluvium
Low Sensitivity
Qt = Quaternary Non-Marine Terrace Deposits
High Sensitivity

This map is based upon a portion of Geological Map of Orange County California, Compiled by P.K. Morton & R.V. Miller (1981) for the California Division of Mines and Geology.